


AlloMap Processing Guide

Step 1

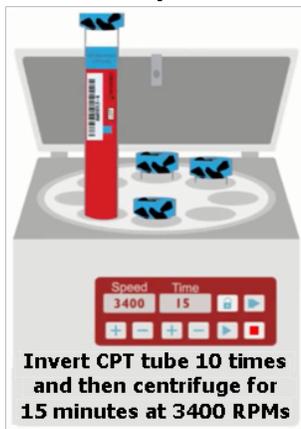


Step 2


Verify PBS tube is labeled with same barcode number on requisition and correct lab accession label




Step 3

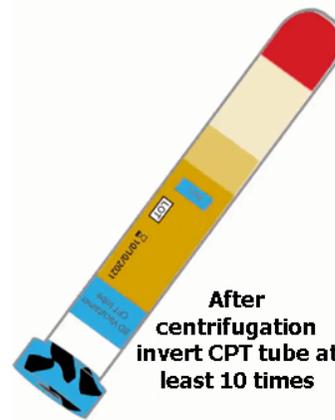


Step 4

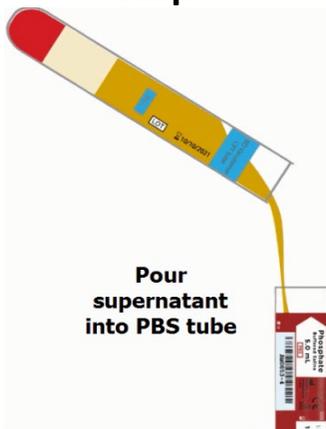


Step 5

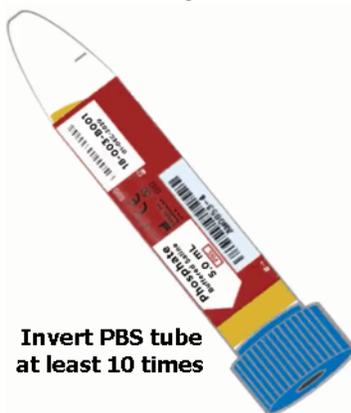


Step 6

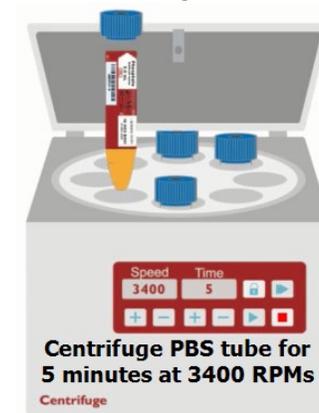


Step 7

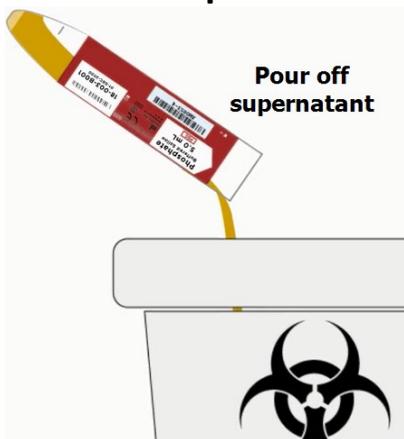


Step 8

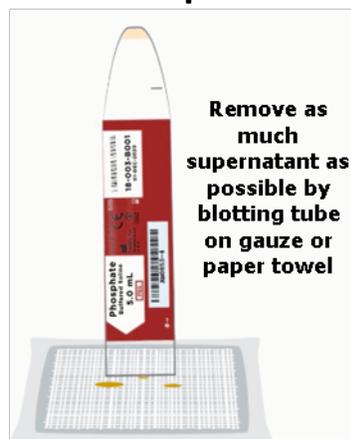

Step 9

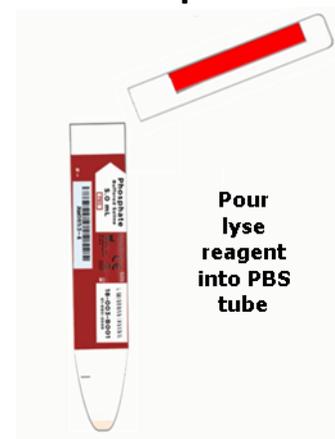

Step 10

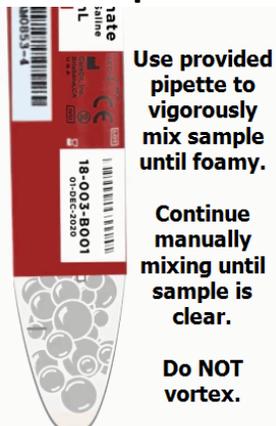

Step 11



Step 12

PLACE ALLOMAP ACCESSION LABEL HERE

12/09/18

10:35am	10:55am	SH
*DRAIN TIME PHLEBO INITIALS	*IN FREEZER TIME (ALLOMAP ONLY)	*ALLOMAP PROCESSOR INITIALS

M: 123456 S/N:

*ICD-10 code: Z94.1 Z48.21 Other:

*City: Brisbane *State: CA 94005

Record time in freezer on requisition